

What is the Chord Blimey! card?

Outputs an arpeggio CV & pulse when it receives a trigger at Pulse In 1. The root note is output at CV Out 2 for the duration of the chord.

A pulse is output at Pulse Out 2 at the end of the arpeggio which can be patched to Pulse In 1 for a looping arpeggio. It also fires at startup to get you going.

Knobs control the speed, root and chord. The root and chord can also be controlled over CV which gets added to the knob value.

If the switch is up, all notes in the chord will be played. When in the mid position, a set number of notes will be played regardless of the number of notes in the chord. Toggle the switch down to change the number of notes.

Random CV outputs from the Audio Outs can be patched to the CV Inputs. At the end of the arpeggio a coin is tossed for each random output to decide if it should change. Every time it doesn't change, the chance of it changing next time is increased.

Don't Know Chords?

No Problem! We've Got All The Chords!

Using the Chord Blimey! card for the Workshop System

By Random Works Rev 1.0 May 2024

05

